




PROFESSIONAL MOVING HEAD USER'S MANUAL

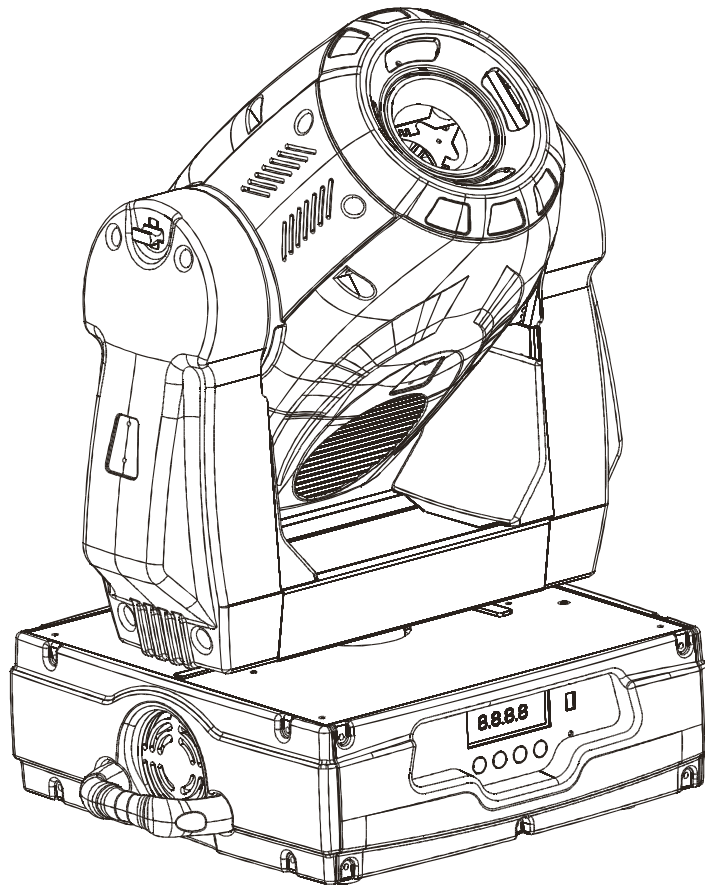

V250SP

KEEP THIS MANUAL FOR FUTURE NEEDS



Thank you for your patronage. We are confident that our excellent products and service can satisfy you.

For your own safety, please read this user manual carefully before installing the device.



CAUTION!

Keep this device away from rain and moisture !



CAUTION!

Unplug mains lead before opening the housing.

Every person involved with the installation, operation and maintenance of this device has to:

-be qualified

-follow carefully the instructions of this manual

INTRODUCTION:

Thank you for having chosen this professional moving head.

You will see you have acquired a powerful and versatile device.

Unpack the device. Inside the box you should find: the fixture device, a power cable, an XLR connection cable, a safety cable and this manual. Please check carefully that there is no damage caused by transportation. Should there be any, consult your dealer and don't install this device.

Features:

_Lamp: Philips MSD 250/2

_Control signal: Standard DMX-512, 16 channels (16 bit), 14 channels (8 bit)

_Stand alone operation with master/slave function, can be sound activated

_Pan/tilt movement: 8 bit and 16 bit resolution

For smooth and precise resolution

Movement: Pan 630° / 540° optional, Tilt 265°

High speed of pan/tilt movement, speed of pan/tilt movement is adjustable

Scan position memory, auto reposition after unexpected movement

_8 colors plus white, with two direction rainbow effect,

_Rotating gobo wheel has 7 rotating gobos plus open, with gobo indexing and different speed gobo shake and rainbow effect

_Static gobo wheel has 7 static gobos plus open with different speed gobo shaking and rainbow effect

_Simple replacement system for gobos enable freely customization

_Prism and prism rotating , with 16 prism macros

_Step zoom function 17°, 20 °lens can be selected

_Strobe effect : 0~13 flashes per second or random strobe

_Dimmer intensity from 0%~100%

_Separately stepless 0%~100% frost filters to get soft beam

_Local and remotely reset and lamp on/off

_Preset program: 7 built in programs can be called up via DMX controller

_Editable program: Edit and save the program to inside EEPROM via the control board or external controller, up to 48 scenes can be saved and then can be run in Stand Alone or sound activated.

_Number of scenes in Program Run can be changed individually

SAFETY INSTRUCTIONS



CAUTION!

Be careful with your operations. With a dangerous voltage you can suffer a dangerous electric shock when touching wires!

This device has left the factory in perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.



Important:

Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.

If the device has been exposed to temperature changes due to environmental changes, do not switch it on immediately. The arising condensation could damage the device. Leave the device switched off until it has reached room temperature.

This device falls under protection-class I. Therefore it is essential that the device be earthed. The electric connection must carry out by qualified person.

The device shall only be used with rate voltage and frequency.

Make sure that the available voltage is not higher than stated at the end of this manual.

Make sure the power cord is never crimped or damaged by sharp edges. If this would be the case, replacement of the cable must be done by an authorized dealer.

Always disconnect from the mains, when the device is not in use or before cleaning it. Only handle the power cord by the plug. Never pull out the plug by tugging the power cord.

During initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective, it should decrease gradually.

During initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective, it should decrease gradually.

Please don't project the beam onto combustible substances.

Fixtures cannot be installed on combustible substances, keep more than 50cm distance with wall for smooth air flow, so there should be no shelter for fans and ventilation for heat radiation.

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.



CAUTION!

Never touch the device during operation!
The housing may heat up



CAUTION!

Never look directly into the light source,
as sensitive persons may suffer an epileptic shock.

Please be aware that damages caused by manual modifications to the device are not subject to warranty. Keep away from children and non-professionals.

GENERAL GUIDELINES

This device is a lighting effect for professional use on stages, in discotheques, theatres, etc. This fixture is only allowed to be operated with the max alternating current which stated in the technical specifications in the last page of this manual, the device was designed for indoor use only. Lighting effects are not designed for permanent operation. Consistent operation breaks may ensure that the device will serve you for a long time without defects. Do not shake the device. Avoid brute force when installing or operating the device. The device shall only be used complete with its protective shield.

While choosing the installation-spot, please make sure that the device is not exposed to extreme heat, moisture or dust. The minimum distance between light-output from the projector and the illuminated surface must be more than 0,5 meter.

Always fix the fixture with an appropriate safety cable if you use the quick lock cam in hanging up the fixture, please make sure the 4 quick lock fasteners turned in the quick lock holes correctly.

Operate the device only after having familiarized with its functions. Do not permit operation by persons not qualified for operating the device. Most damages are the result of unprofessional operation.

Please use the original packaging if the device is to be transported. For safety reasons, please be aware that all modifications on the device are forbidden.

If this device will be operated in any way different to the one described in this manual, the product may suffer damages and the guarantee becomes void. Furthermore, any other operation may lead to short-circuit, burns, electric shock, lamp explosion, crash, etc.

INSTALLATION INSTRUCTIONS

a) Installing or replacing the lamp



CAUTION!

Only install the lamp with the device unplugged from the mains.



CAUTION!

The lamp has to be replaced when it is damaged or deformed.





Before replacing the lamp let the lamp cool down, because during operation, the lamp can reach very high temperature.

During the installation of halogen lamps do not touch the glass bulbs bare handed. Always use a cloth to handle the lamps during insertion and removal.


Do not install lamps with a higher wattage. They generate higher temperatures than which the device was designed for.

For the installation, you need one MSD 250/2 lamp.

Procedure:

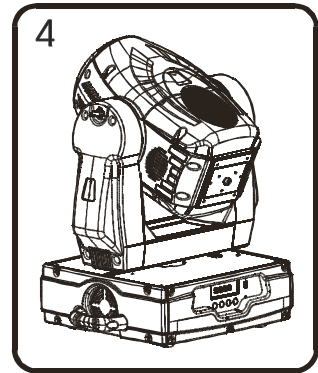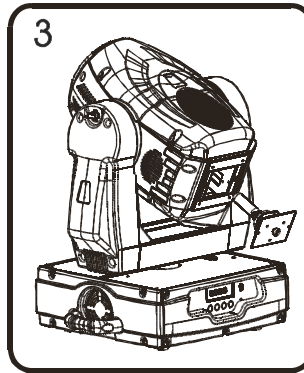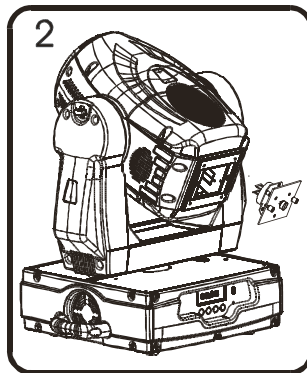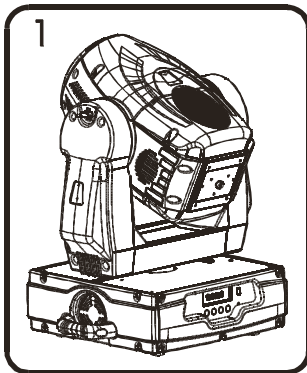

- 1) Unscrew the 2 screws A, B on the bottom of the housing, holding the plate where the lamp is underneath.
- 2) Gently pull the socket holder using the knob in the middle.
- 3) Carefully insert the lamp into the socket. Please remember there is only one way to insert the lamp. Gently slide the lamp and its lamp holder back into place and fasten the 2 screws.
- 4) On the access plate there are 3 small screws marked 1, 2 and 3 which are used to adjust the lamp holder in the lamp housing. You can adjust the 3 screws to fine-tune the position of the lamp to get the maximum light output as shown below.

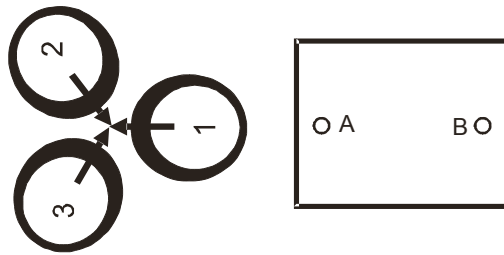


Please remember the lamp is not a hot-restrike type, you must wait for approximately 10 minutes after having turned off the lamp before you can turn it back on again.



CAUTION!
Do not operate this device with open cover

b) Mounting the device



CAUTION!
Please consider the GB7000.15/EN60598-2-17 and the other respective national norms during the installation. The installation must only be carried out by a qualified person.

The applicable temperature for the lighting is between -25°C to 45°C. Do not use the lighting under or above the temperature.

The installation of the effect has to be built and constructed in a way that it can hold 10 times the weight for 1 hour without any harming deformation.

The installation must always be secured with a secondary safety attachment, e.g. an appropriate safety cable.

Never stand directly below the device when mounting, removing or servicing the fixture.

The operator has to make sure the safety relating and machine technical installations are approved by an expert before taking the device into operation for the first time.

These installations have to be approved by a skilled person once a year.



CAUTION!
Before taking into operation for the first time, the installation has to be approved by an expert.

Cautions:

The effect should be installed outside areas where persons may reach it, walk by or be seated.



CAUTION!
When installing the device, make sure there is no highly inflammable material within a distance of min. 0,5m

Overhead mounting requires extensive experience, including amongst others calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the device. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.


	CAUTION!
The electric connection must only be carried out by a qualified electrician.	

Before mounting make sure that the installation area can hold a minimum point load of 10 times the device's weight.

Connect the fixture to the mains with the power plug.

Installation method via clamp

Please refer to the picture below:

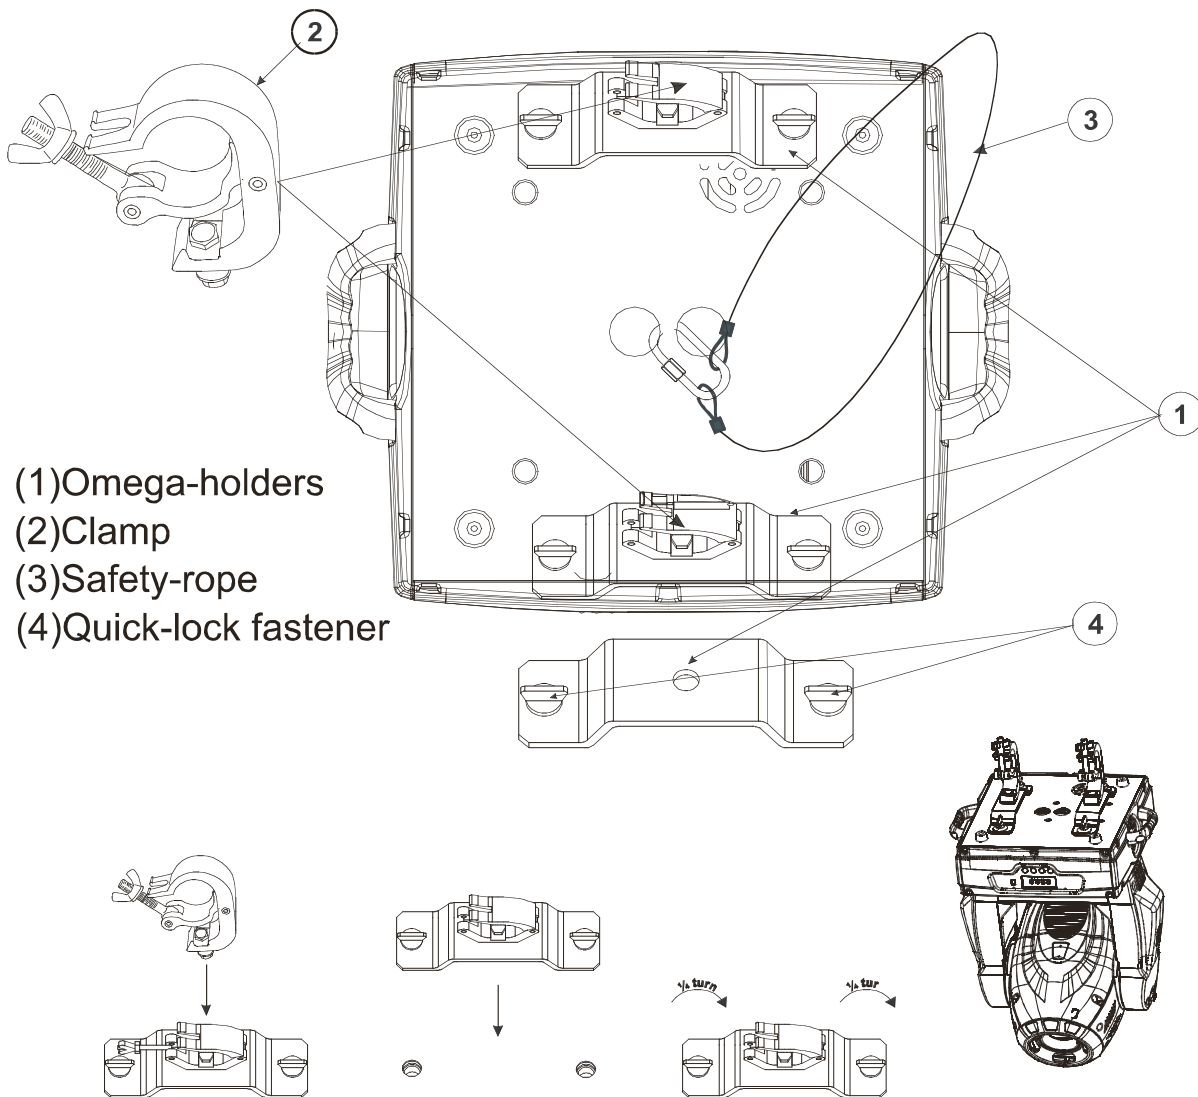


- (1)Omega-holders
- (2)Clamp
- (3)Safety-rope
- (4)Quick-lock fastener

Screw one clamp each via a M12 screw and nut onto the Omega holders.
 Insert the quick-lock fasteners of the first Omega holder into the respective holes on the bottom of the device. Tighten the quick-lock fasteners fully clockwise. Install the second Omega holder.
 Pull the safety-rope through the holes on the bottom of the base and over the trussing system or a safe fixation spot. Insert the end in the carabine and tighten the safety screw.


DMX-512 control connection

Connect the provided XLR cable to the female 3-pin XLR output of your controller and the other side to the male 3-pin XLR input of the moving head. You can chain multiple Moving head together through serial linking. The cable needed should be two core, screened cable with XLR input and output connectors. Please refer to the diagram below.

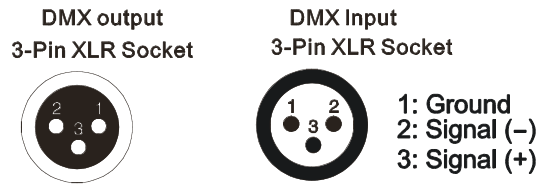


DMX-512 connection with DMX terminator

For installations where the DMX cable has to run a long distance or is in an electrically noisy environment, such as in a discotheque, it is recommended to use a DMX terminator. This helps in preventing corruption of the digital control signal by electrical noise. The DMX terminator is simply an XLR plug with a 120 Ω resistor connected between pins 2 and 3, which is then plugged into the output XLR socket of the last fixture in the chain. Please see illustrations below.

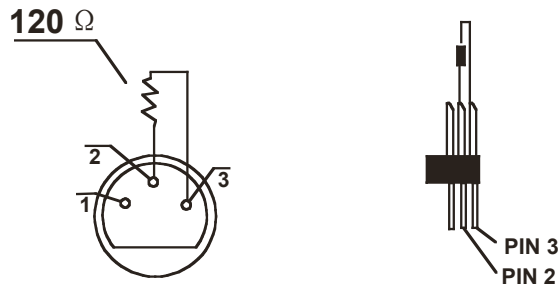

Projector DMX starting address selection

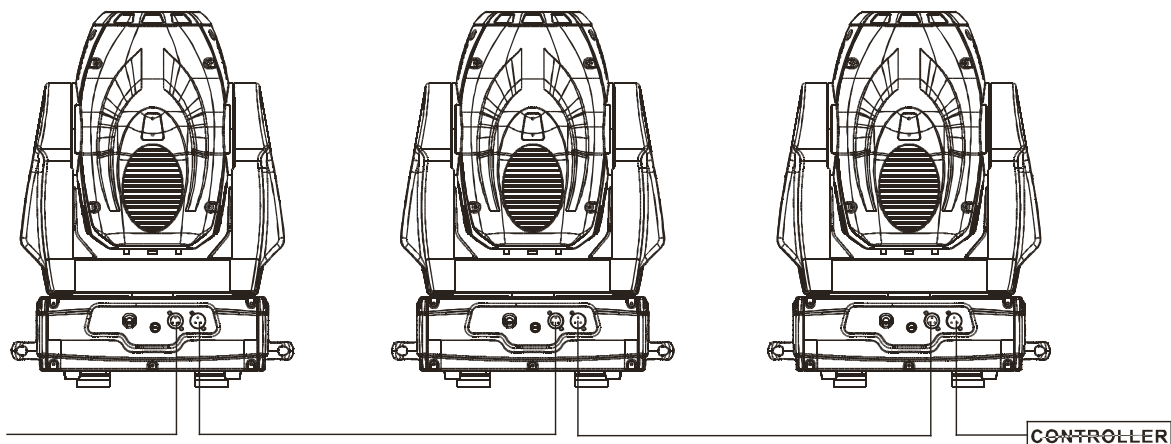

Address 1

All fixtures should be given a DMX starting address when using a DMX signal, so that the correct fixture responds to the correct control signals. This digital starting address is the channel number from which the fixture starts to “listen” to the digital control information sent out from the DMX controller. The allocation of this starting address is achieved by setting the correct number on the display located on the base of the device.

You can set the same starting address for all fixtures or a group of fixtures, or make different address for each fixture individually.

If you set the same address, all the units will start to “listen” to the same control signal from the same channel number. In other words, changing the settings of one channel will affect all the fixtures simultaneously.

If you set a different address, each unit will start to “listen” to the channel number you have set, based on the quantity of control channels of the unit. That means changing the settings of one channel will affect only the selected fixture.

In the case of the spot head, which is a 16 channel fixture, you should set the starting address of the first unit to 1, the second unit to 17(16 + 1), the third unit to 33 (17+ 16), and so on.

Control Board

The Control Board offers several features: you can simply set the starting address, switch on and off the lamp, run the pre-programmed program or make a reset.

The main menu is accessed by pressing the **Mode/esc**-button until the display starts flashing. Browse through the menu by pressing the **Up**-button or **Down**-button. Press the Enter-button in order to select the desired menu. You can change the selection by pressing the **Up**-button or **Down**-button. Confirm every selection by pressing the **Enter**-button. You can leave every mode by pressing the **Mode/esc**-button. The functions provided are described in the following sections.

Default settings shaded

Function Mode	Set Dmx Address	A001~AXXX	DMX address setting
	Value Display	PAN.....	DMX value display
Information	Set To Slave	Slave1,Slave2,Slave3	Slave setting
	Auto Program	Master / Alone	Auto program
Information	Music Control	Master / Alone	Music control
	Time Information	Current Time	Power on running time
		Total Run Time	XXXX(Hours)
	Total Lamp Time	XXXX(Hours)	Lamp running time
	Lamp Off Time	XXXX(Hours)	Lamp off time
	Lamp Off Time	XXXX(Minute)	Lamp off time
	Clear Lamp Time	ON/OFF	Clear lamp time
	Temperature Info	Base Temperature	Temperature on the display
		Head Temperature	board of the base
		XX °C/1	Temperature in the head
		XXX°C/1	Temperature in the head
	Software Version	Ver1.0	Software version of each IC

Lamp Control	Lamp On or Off Automatic La-On Lamp On Via DMX Lamp Off Via DMX Lamp Off No DMX Lamp On at Temp. Lamp Off at Temp.	ON/OFF ON/OFF ON/OFF ON/OFF OFF, OFF~19M 20~79°C, 45°C /68~174 \uparrow 113 \uparrow 80~139°C, 130°C /176~282 \uparrow , 266 \uparrow	Lamp on/off Lamp on/off when Power on Lamp on via DMX Lamp off via DMX Lamp off if no DMX Lamp restart at temp. Lamp off at temp.	
Personality	Status Settings	Address via DMX No DMX Status Pan Reverse Tilt Reverse Fine Resolution Pan Degree Dimmer Speed Feedback Movement Speed Mic Sensitivity	ON/OFF Close/Hold/Auto/Music ON/OFF ON/OFF ON/OFF 630/540 Slow/Quick ON/OFF Speed 1~ 4 70%, 0~99%	Add. via DMX Auto run if no DMX Pan Reverse movement Tilt Reverse movement Fine resolution switch Pan Degree Select Dimmer Speed Select Movement Feedback switch Movement Mode Select Sensitivity of Mic.
	Service Setting	Service Password Fan Voltage Gobo Speed	Password=XXX High/Low Quick/Slow	Service Code “=050” Fan Voltage Select Gobo Change Speed
	Fans Control	Auto Fans Speed High Fans Speed Low Fans Speed		Fans Speed Mode Select
	Display Setting	Shutoff Time		Display shutoff time
	Temperature C/F	Celsius Fahrenheit		Temperature switch between °C/ \uparrow
	Initial Effect	PAN.....	PAN =XXX	Initial effect position
	Reset Default	ON/OFF		Restore factory sett.
Reset Function	Reset All Reset Pan&Tilt Reset Colors Reset Gobos Reset Shutter Reset Others		Reset all motors Reset Pan/Tilt Reset color wheel Reset gobos Reset shutter and/or dimmer Reset other motors	
Effect Adjust	Test Channel	PAN		Test function
	Manual Control	PAN :	PAN =XXX :	Fine adjustment of the lamp
	Calibrate Values	--Password-- Color wheel :	Password=XXX Color wheel=XXX :	Calbrate and adjust the effects to standard/right position Password “050”
Users Mode Set	User Mode	XXXXXXX(Band) User Mode A User Mode B User Mode C		User’s mode to change channel numbers
	Edit User Mode	PAN :	PAN = CH01 :	Preset User modes

Edit Program	Select Programs	Auto Pro Part 1 Auto Pro Part 2 Auto Pro Part 3	Program 1 ~ 10 Program 1 ~ 10 Program 1 ~ 10	Program 1 Program 2 Program 3	Select programs to be run
	Edit Program	Program 1 : Program 10	Program Test Step 01=SCxxx Step 64=SCxxx	("STEP XX")	Testing program Program in loop Save and exit
	Edit Scenes	Edit Scene 001 ~ Edit Scene 250	Pan,Tilt,..... --Secne Time-- Input By Outside	Pan=xxx..... TIME=xx.xs	Save and automatically return manual scenes edit
	Rec. Controller	XX~XX			Automat. scenes rec

Function Mode

DMX address setting

With this function, you can adjust the desired DMX-address via the Control Board.

- Select “**Set DMX address**” via the encoder.
- Press the encoder, adjust the DMX address by turning the encoder.
- Press the encoder to confirm.
- Press the Mode/Esc-button in order return to the main menu.

Display the DMX 512 value of each channel

With this function you can display the DMX 512 value of each channel. The display automatically shows the channel with a value changing.

Slave setting

With this function, you can define the device as slave.

Auto Program

With this function, you can run the internal program. You can select the desired program under “**Select program**”.

You can set the number of steps under “**Edit program**”. You can edit the individual scenes under “**Edit scenes**”.

With this function, you can run the individual scenes either automatically, i.e. with the adjusted Step-Time.

Music control

With this function, you can run the internal program sound-controlled.

Information

Time information

Power on time

With this function, you can display the temporary running time of the device from the last power on. The display shows “XXXX”, “XXXX” stands for the number of hours. The counter is resetted after turning the device off.

Total run time

With this function, you can display the running time of the device. The display shows “XXXX”, “XXXX” stands for the number of hours.

Total lamp time

With this function, you can display the running time of the lamp. The display shows “XXXX”, “XXXX” stands for the number of hours.

Lamp off time

With this function, you can display the temporary running time of the lamp from the last lamp on. The display Shows “XXXX”, “XXXX” stands for the number of hours. The counter is resetted after turning the lamp off.

Clear lamp time

With this function you can clear the running time of the lamp. Please clear the lamp time every time you replace the

lamp.

- Select **“Clear lamp time”** by turning the encoder.
- Press the encoder, the display shows **“ON”** or **“OFF”**.
- Press the encoder to confirm.
- Press the Mode/Esc-button in order to return to the main menu.

Temp. Info.

Base Temp

With this function you can display the temperature in the projector base (near LCD-display) in Celsius.

Head Temp

With this function you can display the temperature on the display board of the base (near CMY-filter) in Celsius.

Software version

With this function, you can display the software version of the device.

- Select **“Software version”** by turning the encoder.
- Press the encoder, the display shows **“V-X.X”**, **“X.X”** stands for the version number, e.g. **“V-1.0”**, **“V-2.6”**.
- Turn the encoder in order to read the version of every individual IC.
- Press the Mode/Esc-button in order to return to the main menu.

LAMP CONTROL

When the real temperature around the lamp is higher than the preset value, the lamp will be shut down in 5 minutes automatically.

·When the LCD display shows **“Off”**, it means the lamp must be turned on again manually;

·When the LCD display shows **“Hot”**, it means the actual temperature around the lamp is still higher than the preset value, so even the lamp can not be striked even the menu Lamp is turned to ON, as the lamp switch is compelled to turned off.

·When the temperature unit after the temperature value come to lowercase letter **“c”** or **“f”**, it means menu Lamp is turned to ON, but the lamp is not full dimming up.

·When the temperature unit after the temperature value come to capital letter **“C”** or **“F”**, it menu Lamp is turned to ON, and the lamp is full intensity.

Lamp on/off

With this function you can switch the lamp on or off via the Control Board.

- Select **“Lamp on/off”** by turning the encoder.
- Press the encoder, the display shows **“ON”** or **“OFF”**.
- Turn the encoder to select **“ON”** if you wish to strike the lamp or **“OFF”** in order to switch it off.
- Press the encoder to confirm.
- Press the Mode/Esc-button in order to return to the main menu.

Remark: The menu Lamp On/Off is the software command only, the lamp can be striked successfully only when the menu Lamp is set to ON and the actual temperature is lower than the limited value.

Lamp on/off when power on

With this function you can select if the lamp will be switched on when switching the power on. Select **“ON”** by turning the encoder if you wish to enable this function or **“OFF”** if you don't.

Lamp on via external controller

With this function you can select if you can switch the lamp on via an external controller (DMX-16 channel of internal program, value 40-59). Select **“ON”** by turning the encoder if you wish to enable this function or **“OFF”** if you don't.

Lamp off via external controller

With this function you can select if you can switch the lamp off via an external controller (DMX-16 channel of internal program, value 60-79). Select **“ON”** by turning the encoder if you wish to enable this function or **“OFF”** if you don't.

Lamp Off if no DMX

With this function you can select to switch off the lamp off automatically if there is no DMX signal). Select “ON” by turning the encoder if you wish to enable this function or “OFF” if you don’t.

Lamp on at temp.

With this function you can set the inside temperature from which the projector will restrike the lamp after automatic lamp shut off.

Lamp off at temp.

With this function you can set the inside temperature at which the projector will automatically switch the lamp off. Turn the encoder to select the maximum inside temperature between 60° C and 159° C. Inside temperatures below 90° C are not critical. 90° C and more should lead to the lamp being switched off. Please note that the outside temperature should not exceed 45° C.

When the temperature around the lamp is higher than the preset value continuously up to 5 minutes, the lamp will be shut off automatically.

If the lamp be shut off automatically due to over heat, it can not be striked again automatically, it must be turned on again by manually.

PERSONALITY

Status setting

Address via DMX

With this function, you can adjust the desired DMX-address via an external controller.

- Select “Address via DMX” by turning the encoder.
- Press the encoder, the display shows “ON” or “OFF”.
- Turn the encoder to select “ON” if you wish to enable this function or “OFF” if you don’t.
- Press the encoder to confirm.
- Press the Mode/Esc-button in order to return to the main menu.
- On the controller, set the DMX-value of channel 1 to "7".
- Set the DMX-value of channel 2 to "7" or "8". When set to "7" you can adjust the starting address between 1 and 255. When set to "8" you can adjust the starting address between 256 and 511.
- Set the DMX-value of channel 3 to the desired starting address. If you want to set the starting address to 57, set channel 1 to "7", channel 2 to "7" and channel 3 to "57". If you want to set the starting address to 420, set channel 1 to "7", channel 2 to "8" and channel 3 to "164" (256+164=420).
- Wait for approx. 20 seconds and the unit will carry out a reset. After that, the new starting address is set.

Auto If No DMX

With this function, when the drive is not DMX signal, it runs automatism, close, hold and music, the default is hold.

Pan Reverse

With this function you can reverse the Pan-movement.

Tilt Reverse

With this function you can reverse the Tilt-movement.

Fine resolution

With this function, you can fine resolution switch of pan movement or tilt movement.

Pan Degree

With this function, you can select pan degree for 630 or 540.

Dimmer Speed

With this function, you can select dimmer speed for slow or quick.

Feedback

With this function, you can feedback switch of pan movement or tilt movement.

Movement Speed

With this function, you can select scan mode from 1 to 4.

Mic Sensitivity

With this function, the default is 70%, you can select the desired microphone sensitivity from 0 % to 99 %.

Service setting**Service Password**

With this function, you can set the service password.

Fan Voltage

With this function, you can select fan voltage for high or low.

Attention: The model is not recommended when ambient temperature is higher than 15 Celsius degree.

Gobo speed

With this function, you can select GOBO speed for quick or slow, the default is slow.

Fans Control

With this function, you can set the speed of the running fans. The selections have Auto, high and low.

Display settings**Shut off time**

With this function you can shut off the LCD display after 2 to 59 minutes. Turn the encoder in order to select the desired shut off time.

Temperature C/F

With this function, Display the temperature for Celsius or Fahrenheit.

Initial effect

With this function, Display initial effect position.

Reset Default

With this function, you can select restore factory set for ON or OFF, the default is OFF.

Reset-functions

With this function you can reset the device via the Control Board. You can select the different reset functions by turning the encoder.

Effect Adjust**Test function of each channel**

With this function you can test each channel on its (correct) function.

Lamp adjustment

With this function, you can adjust the lamp more easily. All effects will be canceled, the shutter opens and the dimmer intensity will be set to 100 %. With the individual functions, you can focus the light on a flat surface (wall) and perform the fine lamp adjustment.

Calibrate values

With this function, you can calibrate and adjust the effect wheels to their correct positions. The password of calibrate values is 050.

Users mode set

In this menu, user can select different channels list by different sequence:

For example, after the user enter this manual, if select Auto Program = CH 15, means in this User's mode, the "Dimmer" is in Channel 11.

User mode

With this function, you can create user defined channel orders.

Preset User mode

With this function, you can adjust the rest user defined channel order.

Edit program

Select program

With this function, you can select the program for the Program Run.

Edit program

With this function, you can edit the internal programs.

Edit scenes

With this function, you can edit the scenes of the internal programs.

Auto scenes rec.

The moving head features an integrated DMX-recorder y which you can transmit the programmed scenes from your DMX-controller to the moving head. Adjust the desired scene numbers via the encoder (from – to). When you call up the scenes at your controller, they will automatically be transmitted to the moving head.

Excursion:

A Master unit can send up to 3 different data groups to the Slave units, i.e. a Master unit can start 3 different Slave units, which run 3 different programs. The Master unit sends the 3 program parts in a continuous loop.



The Slave unit receives data from the Master unit according to the group which the Slave unit was assigned to. If e.g. a Slave unit is set to "Slave 1" in the menu "Set to Slave", the Master unit sends "Auto Program Part 1" to the Slave unit. If set to "Slave 2", the Slave unit receives "Auto Program Part 2".

To start a Auto Program please proceed as follows:

1. Slave-Setting

- Select "Function Mode" by turning the encoder.
- Press the Enter button to confirm.
- Select "Set to slave" by turning the encoder.
- Press the Enter button to confirm.
- Turn the encoder to select "Slave 1", "Slave 2" or "Slave 3".
- Press the Enter button to confirm.
- Press the Mode/Esc button in order to return to the main menu.

2. Automatic Program Run

- Select "Function Mode" by turning the encoder.
- Press the Enter button to confirm.
- Select "Auto Program" by turning the encoder.
- Press the Enter button to confirm.

- Turn the encoder to select “Master” or “Alone”. The selection "Alone" means Stand Alone-mode and "Master" that the device is defined as master.
- Press the Enter button to confirm.
- Press the Mode/Esc button in order to return to the main menu.

3. Program selection for Auto Pro Part

- Select “Edit program” by turning the encoder.
- Press the Enter button to confirm.
- Select “Select programs” by turning the encoder.
- Press the Enter button to confirm.
- Turn the encoder to select “Auto Pro Part 1”, “Auto Pro Part 2” or “Auto Pro Part 3”, and thus select which Slave program is to be sent. Selection “Part 1” means, that the Slave unit runs the same program as the master units.
- Press the Enter button to confirm.
- Press the Mode/Esc button in order to return to the main menu.

4. Program selection for Edit Program

- Select “Edit program” by turning the encoder.
- Press the Enter button to confirm.
- Select “Edit program” by turning the encoder.
- Press the Enter button to confirm.
- Turn the encoder to select the desired program. With this function you can edit specific scenes into a specific program.
- Press the Enter button to confirm.
- Press the Mode/Esc button in order to return to the main menu.

5. Automatic Scene Recording

- Select “Edit program” by turning the encoder.
- Press the Enter button to confirm.
- Select “Edit scenes” by turning the encoder.
- Turn the encoder to select the desired scene numbers. You can program a maximum number of 250
- Turn the encoder to select the desired scene numbers. You can program a maximum number of 250 scenes.
- Press the Enter button to confirm.
- Press the Mode/Esc button in order to return to the main menu.

Example:

Program 2 includes scenes: 10, 11, 12, 13

Program 4 includes scenes: 8, 9, 10

Program 6 includes scenes: 12, 13, 14, 15, 16


Auto Pro Part 1 is Program 2;

Auto Pro Part 2 is Program 3;


Auto Pro Part 3 is Program 6

The 3 Slave groups run the Auto Program in certain time segments, as shown in the following picture:

 
Part 1:



Part 2:

 

Part 3:

 

DMX channel's functions and their values (16 DMX channels):	
<u>Channel 1 - Color Wheel :</u>	
0-13	Open / white
14-27	Color 1
28-41	Color 2
42-55	Color 3
56-69	Color 4
70-83	Color 5
84-97	Color 6
98-111	Color 7
112-127	Color 8
128-189	Forwards rainbow effect from fast to slow
190-193	No rotation
194-255	Backwards rainbow effect from slow to fast
<u>Channel 2 - Rotating gobos, cont. rotation :</u>	
0-9	Open
10-19	Rot. gobo 1
20-29	Rot. gobo 2
30-39	Rot. gobo 3
40-49	Rot. gobo 4
50-59	Rot. gobo 5
60-69	Rot. gobo 6
70-79	Rot. gobo 7
80-99	Gobo 1 shake slow to fast
100-119	Gobo 2 shake slow to fast
120-139	Gobo 3 shake slow to fast

140-159	Gobo 4 shake slow to fast
160-179	Gobo 5 shake slow to fast
180-199	Gobo 6 shake slow to fast
200-219	Gobo 7 shake slow to fast
220-255	Rot. gobo wheel cont. rotation slow to fast
<u>Channel 3 - Rotating gobo index, rotating gobo rotation :</u>	
0-127	Gobo indexing
128-189	Forwards gobo rotation from fast to slow
190-193	No rotation
194-255	Backwards gobo rotation from slow to fast
<u>Channel 4- Fixed Gobos :</u>	
0-13	Open/hole
14-27	Gobo 1
28-41	Gobo 2
42-55	Gobo 3
56-69	Gobo 4
70-83	Gobo 5
84-97	Gobo 6
98-111	Gobo 7
112-127	Gobo 1 shake slow to fast
128-143	Gobo 2 shake slow to fast
144-159	Gobo 3 shake slow to fast
160-175	Gobo 4 shake slow to fast
176-191	Gobo 5 shake slow to fast
192-207	Gobo 6 shake slow to fast
208-223	Gobo 7 shake slow to fast
224-255	Gobo wheel rotation from slow to fast
<u>Channel 5 - PAN movement 8bit :</u>	
<u>Channel 6 - TILT movement 8bit :</u>	
<u>Channel 7 - Speed pan/tilt movement:</u>	
0-225	max to min speed
226-235	blackout by movement
236-245	blackout by all wheel changing
246-255	no function
<u>Channel 8- 3 facet rotating prism, Prism / Gobo macros:</u>	
0-3	open

4-63	Forwards rotation from fast to slow
64-67	No rotation
68-127	Backwards rotation from slow to fast
128-135	Macro 1
136-143	Macro 2
144-151	Macro 3
152-159	Macro 4
160-167	Macro 5
168-175	Macro 6
176-183	Macro 7
184-191	Macro 8
192-199	Macro 9
200-207	Macro 10
208-215	Macro 11
216-223	Macro 12
224-231	Macro 13
232-239	Macro 14
240-247	Macro 15
248-255	Macro 16
Channel 9 – Focus :	
0-255	Continuous adjustment from far to near
Channel 10 - Shutter, strobe:	
0-31	Shutter closed
32-63	No function (shutter open)
64-95	Strobe effect slow to fast
96-127	No function (shutter open)
128-159	Pulse-effect in sequences
160-191	No function (shutter open)
192-223	Random strobe effect slow to fast
224-255	No function (shutter open)
Channel 11- Dimmer (intensity):	
0-255	Intensity 0 to 100%
Channel 12 – Iris:	
0-191	Max. diameter to Min.diameter
192-223	Pulse opening fast to slow
224-255	Pulse closing slow to fast
Channel 13 –Frost:	

0-191	Frost 0~100%
192-223	Pulse opening fast to slow
224-254	Pulse closing slow to fast
255	100% Frost
Channel 14– Lamp on/off, reset, internal programs:	
0-19	Color&Gobo change normal
20-29	Color change to any position
30-39	Color&Gobo change to any position
40-59	Lamp on
60-79	Lamp switch off
80-84	All motor reset
85-87	Scan motor reset
88-90	Colors motor reset
91-93	Gobo motor reset
94-96	Shutter & Dimmer motor reset
97-99	Other mo reset
100-119	Internal program 1 (secne1~8 of EEPROM)
120-139	Internal program 2 (secne9~16 of EEPROM)
140-159	Internal program 3 (secne17~24 of EEPROM)
160-179	Internal program 4 (secne25~32 of EEPROM)
180-199	Internal program 5 (secne33~40 of EEPROM)
200-219	Internal program 6 (secne41~48 of EEPROM)
220-239	Internal program 7 (secne49~56 of EEPROM)
240-255	Music Control (secne of Program 1)
Channel 15 – Pan fine 16bit	
Channel 16– Tilt fine 16bit	

ERROR CODES:

When you turn on the fixture, it will make a reset first. The display may show “XXer” while there are problems with one or more channels. “XX” stands for channel 1,2,3,4,5,6,8,9 who has the testing sensor for position.

For example, when the display shows “01Er”, it means there is some error in channel 1. If there are some errors on channel 1, channel 5, channel 6 at the same time, you may see the error message “01Er”, “05Er”, “06Er” flash repeated for 5 times, and then the fixture will generate a reset signal, all the stepper reset. If the fixture remain error message after performing reset more than 3 times, it will detect whether the fixture has more than 3 errors. If the fixture has more than 3 errors (including 3 errors), all the channels can not work properly; but if the fixture has less than 3 errors, only the channels which have errors can not work properly, others can work as usual.

Color-wheel error:

This message will appear after the reset of the fixture if the magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepping-motor is defective (or its drive circuit on the main PCB). The color wheel is not located in the default position after the reset.

Rotating gobo-wheel error:

The gobo-wheel is not located in the default position after start-up or after a reset command. This message will appear after a fixture reset if the magnetic-indexing circuit malfunctions (sensor failed or magnet is missing) or there is a stepper motor failure (defective motor or a defective motor IC drive on the main PCB).

Rotating gobo indexing error:

The gobo is not located in the default position after start-up or after a reset command. This message will appear after a fixture reset if the magnetic-indexing circuit malfunctions (sensor failed or magnet is missing) or there is a stepper motor failure (defective motor or a defective motor IC drive on the main PCB).

Fix Gobo-wheel error

This message will appear after the reset of the fixture if the magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepping-motor is defective (or its drive circuit on the main PCB). The fix gobo wheel is not located in the default position after the reset.

PAN-yoke movement error

(PAN-yoke movement error) This message will appear after the reset of the fixture if the yoke's magnetic-indexing circuit malfunction (sensor failed or magnet missing) or the stepping-motor is defective (or its driving IC on the main PCB). The yoke is not located in the default position after the reset.

TILT-head movement error

(TILT-head movement error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepping-motor is defective (or its driving IC on the main PCB). The head is not located in the default position after the reset.

Prism-wheel error

This message will appear after the reset of the fixture and if the magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepping-motor is defective (or its driver circuit on the main PCB). The prism-wheel is not located in the default position after the reset.

Focus error

This message will appear after the reset of the fixture and if the magnetic indexing circuit malfunctions (sensor failed or magnet missing) or the stepping-motor is defective (or its driver circuit on the main PCB). The focus is not located in the default position after the reset.

CLEANING AND MAINTENANCE

The following points have to be considered during the inspection:

- 1) All screws for installing the devices or parts of the device have to be tightly connected and must not be corroded.
- 2) There must not be any deformations on the housing, color lenses, fixations and installation spots (ceiling, suspension, trussing).
- 3) Mechanically moved parts must not show any traces of wearing and must not rotate with unbalances.
- 4) The electric power supply cables must not show any damage, material fatigue or sediments. Further instructions depending on the installation spot and usage have to be adhered by a skilled installer and any safety problems have to be removed.



CAUTION!

Disconnect from mains before starting maintenance operation.

We recommend a frequent cleaning of the device. Please use a moist, lint- free cloth. Never use alcohol or solvents.

There are no serviceable parts inside the device except for the lamp. Please refer to the instructions under “Installation instructions”.

Should you need any spare parts, please order genuine parts from your local dealer.

TECHNICAL SPECIFICATIONS

Power supply:

AC 100V ~, 50Hz; AC 120V ~, 50Hz; AC 208V ~, 50Hz; AC 220V ~, 50Hz; AC 230V ~, 50Hz; AC 240V ~, 50Hz;

AC 100V ~, 60Hz; AC 120V ~, 60Hz; AC 208V ~, 60Hz; AC 220V ~, 60Hz; AC 230V ~, 60Hz; AC 240V ~, 60Hz;

Power consumption: max. **400W**

Lamp: MSD 250/2

Packing dimensions: 59.5x45x50cm

Net weight: 26KGS

Gross weight: 30KGS

Remark: errors and omissions for every information given in this manual excepted. All information is subject to change without prior notice.